



Basic Installation of SPOTER - M2100 DEVICE

1. Hardware Installation [wiring]:

There are two wires:

- Red wire connect to Battery **POSITIVE [+]** Pole.
- Black wire connect to Battery **NEGATIVE [-]** Pole.

Put the device in a safe place, **much electric wiring area, meter box can block satellite signal.**

2. Software Installation [By SMS]:

The device configure via SMS command.

- Activate the device in SERVER1 , SMS : **SERVER,666666,1, 23.226.141.151,5002,0#**

Reply from Device SIM: **set ip ok / admin ip ok**

- Activate SIM APN SMS : For Vodafone : **APN,666666,www#**
For Airtel : **APN,666666,airtelgprs.com#**

Reply from Device SIM : **ok**

- Restart The Device SMS : **Reset,666666#**

Reply from Device SIM : **Restart ok / Ok**

3. Check Installation :

Login **SERVER1** and click on IMEI no of the Device , the device shows exact current location.

- Check Device current setting SMS : **Param,666666#**

Reply from Device SIM : **Device IMEI , Server IP, Port, Apn Details.**

4. General Fault Recovery :

If the device not shown in server properly, or show something different :

- Check the **FUSE** in red wire.
- First Power off the device, Then Power on the Device after 5 minutes.
- Sent restart command through SMS : **Reset,666666#**

After that the fault is not recovered you can do Factory reset by SMS : **factory,666666#**

Reply from Device SIM : **Ok / Factory reset Done.**

***** **After Factory Setting you have do Software Installation [By SMS] Again.**