


Wiring diagram

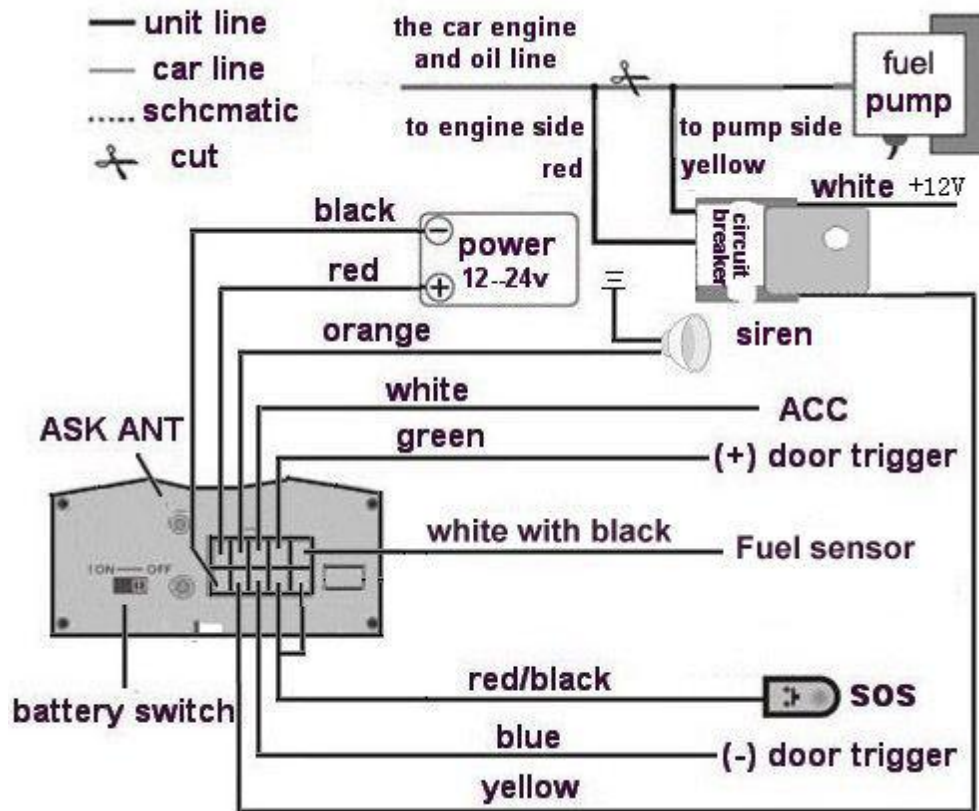

- | | | |
|-----------------------|---|-----------------------------------|
| 1. ACTIVATE DEVICE | : | begin123456 |
| 2. SELECT SERVER | : | adminip123456 23.226.141.151 5001 |
| 3. AUTHORIZATION | : | admin123456 999999999 |
| 4. GPRS MODE | : | gprs123456 |
| 5. APN Vodafone | : | Apn123456 www |
| 6. APN Airtel | : | Apn123456 airtelgprs.com |
| 7. SERVER TRACK | : | fix030s***n123456 |
| 8. POWER OFF ALERM | : | extpower123456 on |
| 9. SOS | : | Long Press 3 Sec. |
| 10. CUT POWER | : | quickstop123456 |
| ON POWER | : | resume123456 |
| 11. ACTIVATE FUEL18 | : | protocol123456 18 |
| 12. ACTIVATE FUEL12 | : | protocol123456 12 |
| 13. LISTEN VOICE MODE | : | monitor123456 |
| 14. TRACKING MODE | : | tracker123456 |